

TAVOLINO Xs90 ONE TOUCH COFFEE MACHINE DESCALING PROCEDURE

De-scaling is a necessary part of looking after your coffee machine. It removes unnecessary limescale from the machine pipework thus preventing loss in water temperature & taste issues.

Frequency: The frequency that this procedure should be carried out will depend on water hardness levels in your area. The machine will prompt for de-scaling. The following message appears in the display area DE-CALCIFYING NECESSARY.

NB: Once started, the cleaning procedure may not be stopped. The procedure takes approximately 60 minutes.

(A) Machine de-scaling

1. Switch on the Unit at the ON / OFF button. Open the front cover.
2. Press and hold the programming button until you hear an audible signal. Rotate the programming dial until RINSE is displayed. Now press the programming button immediately.
3. Rotate the programming dial until DE-SCALE is displayed. Now press the programming button immediately.
4. The display reads : EMPTY TRAY / EMPTY GROUNDS. Remove the drip tray and the dump box and empty. Re-insert both into the machine.
5. The display reads : INSERT AGENT IN WATER TANK / PRESS STEAM. Fill the water tank with 600ml of cold water. Empty the contents of one sachet of *Dezcal* de-scaler (Bewleys part number OSP3022) into the water. Stir until completely dissolved.
6. Remove the frother from the steam arm on the machine. Also remove the drip tray grill to avoid unnecessary splashing during the de-scale cycle.
7. Press the steam button to begin the de-scale cycle.



Press to continue

- The machine will now begin the de-scaling cycle. The display will read : MACHINE DE-SCALING & the rinse light will flash.
- After a period, you will hear an acoustic signal and the machine will read OPEN TAP. You must now open the hot water tap.



Rotate dial to continue

- The machine will now continue through the de-scaling cycle. The display will read : MACHINE DE-SCALING & the rinse light will flash.
- After a period, you will hear an acoustic signal and the machine will read CLOSE TAP. You must now close the hot water tap.



Rotate dial to continue

- The machine will now continue through the de-scaling cycle. The display will read : MACHINE DE-SCALING & the rinse light will flash.
- After a period, you will hear an acoustic signal and the machine will read EMPTY TRAY / EMPTY GROUNDS. Remove the drip tray and the dump box and empty. Re-insert both into the machine.

(B) Machine rinsing

- The machine will prompt to FILL WATER & PRESS STEAM. If necessary empty out any remaining liquid from the water tank. Fill the water tank with 600ml of cold water.
- Now repeat process from step 7 to step 12.
- After a period, you will hear an acoustic signal and the machine will read EMPTY TRAY / EMPTY GROUNDS. Remove the drip tray and the dump box and empty.
- Clean the base of the coffee machine before re-inserting the drip tray and dump box into the machine.
- The display reads : SELECT PRODUCT. The de-scaling cycle is now complete and the machine ready for use.