


Problem: I find the product fills levels do not suit my taste (too strong or too weak)

Solution: You can change the dispense levels to suit your own preferences.

Remedy: The machine comes with preprogrammed fill levels. The fill levels can be changed as follows:

1. Fill the water tank with fresh cold tap water and switch the machine on.
2. Place the desired capsule into the capsule holder and pull down the capsule holder lever.
3. Place a preheated cup into the product dispense area.

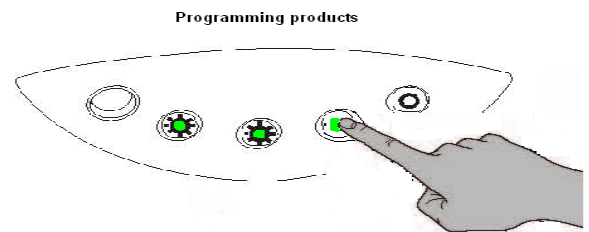

4. Press and **hold** the product button that you wish to change until your desired fill level has been reached.
5. Release the product button. Your new fill level is now programmed. The machine will now dispense your new fill level from now on.
6. We recommend that you do not change the default setting on the espresso product button. An espresso is an intense short shot of coffee that is extracted quickly under pressure. An ideal espresso volume is between 1fl oz – 1½fl oz (30ml – 45ml)